

CLEANING MATERIALS

2.5MM AND 1.25MM CLEANING SWABS



Cleaning swabs from NTT-ATT, available in 2.5mm or 1.25mm diameter, provide an easy means of cleaning in-line adaptors. Supplied in packs of 100, each swab has a cleaning tip that may be used with isopropyl alcohol, or dry as required. No glues are used in the manufacturing process of the swabs, eliminating the risk of contamination.

These swabs are particularly useful for cleaning adaptors that undergo regular mate-demate cycles at test stations or in patch panels where frequent reconfiguration occurs.

Specifications

Type	Type	Type
	2.5mm	1.25mm
Order Code	14100400	14100401
Cleans Per Stick	1 clean per piece for maintenance and repair	
Connectors Cleaned	SC, FC, ST, MFM, HA	MU, LC
Length (mm)	146	101
Packaging	100 pieces per pack	100 pieces per pack




CLEANING MATERIALS



2.5MM AND 1.25MM CLEANING SWABS



How to Clean

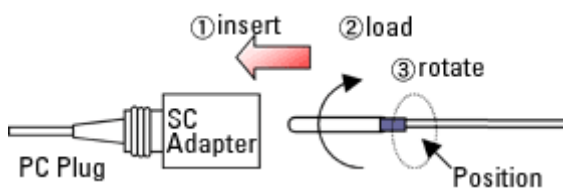

Typical application of cleaning an SC connector through an adaptor

1. Insert - Ensure that stick is held straight when inserting into sleeve.
2. Load - Apply sufficient pressure (approx 600-700g) to ensure ferrule is depressed in the sleeve.
3. Rotate - Rotate the stick clockwise 4-5 times, while ensuring direct contact is maintained with the ferrule end-face.

Note: Number of possible wipes: Maintenance (repair) ~1 use / piece

Equipment construction: 4 uses / piece (max.)

